Care, Maintenance, and Trouble-Shooting

The ZipCombo is designed to be maintenance-free. With proper care, this centrifuge will provide years of service. However, if repairs should be needed, please contact LW Scientific, Inc.

Please follow these recommended auidelines:

- 1 Use only quality test tubes. Lower-quality plastic or glass tubes may fracture and release their contents into the tube chamber.
- 2 Never force a tube into the tube shields or slots in the hematocrit rotor.
- 3 Use only 30mm 40mm long capillary tubes with a maximum diameter of 0.95mm. Replacement tubes are available from your LW Scientific distributor.
- 4 Clean with common disinfectants or isopropyl alcohol. Do not allow moisture to seep into the centrifuge or do not immerse the electrical components in any liquid during the cleaning process.
- Because of safety issues with high g-forces in a centrifuge, it is recommended that rotors be inspected monthly for wear and fatigue. If there is any indication of wear, the rotor should be removed from service. Contact LW Scientific for return instructions so the rotor can be evaluated by a technician for repair or replacement. After 2 years of service, it is recommended that rotors be returned to LW Scientific for inspection. Following these procedures will ensure safety of lab personnel as well as extend the life of the centrifuge.
- **6** Never touch the rotor before it comes to a complete stop.
- 7 Disconnect plug from socket before changing rotors.
- **8** Reduce speed if:
 - Fluid escapes from tubes during spinning.
 - The centrifuge is not running smoothly.
 - The centrifuge moves or vibrates during spinning.

CAUTION: Using tubes larger than 0.95mm in diameter can prevent the rotor cover from seating properly and cause blood and sealant to spin out of the tubes during the spinning process.

Speed

(rpm)

12000

Specifications

Speed range:

-p	
Maximum RCF:	Microtubes - 6900g Microhematocrits - 7500g
Max. Volume:	•
Hematocrit rotor:	12) 30mm - 40mm capillary tube
Microtube rotor:	6) 0.2ml/0.5ml; 0.6ml/1.5ml; 1.5ml/2.0ml microtubes
Microplate rotor:	2) 8x0.2ml strips
Input Voltage:	100-240VAC: 50-60Hz

1000-12000rpm

Output Voltage:	24V DC

Timer: 15 sec - 99 min / Continuou

Display:	LCD Digital
Height:	5.1" (130mm)
Length:	7.9" (200mm)
Width:	6.3" (160mm)
Weight:	2 lbs (0.9 kg)

MKT-7.5.3.-L-194 | Rev 4

2000 220g 190g 100g 4000 840g 770g 400g 6000 1900g 1700g 900g 3400g 8000 3100g 1600g 10000 5200g 4800g 2600g

G-Force Chart

Microtube

Rotor

6900g

Microplate

Rotor

3700g

Hematocrit

Rotor

Scientific


ZipCombo Centrifuge

Instruction Manual







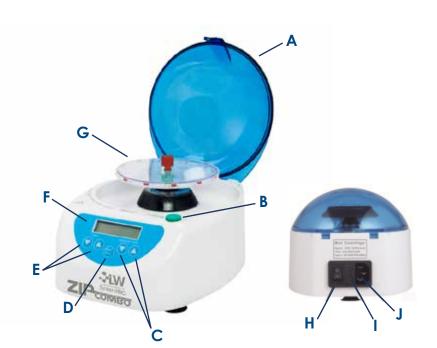

- **A** Lid
- **B** "Open" Button
- C Speed Adjustment
- **D** "Start/Stop" Button
- E Time Adjustment
- **F** LCD Display
- **G** Rotor
- H Power Button
- Fuse
- **J** Plug

Replacement Parts:



EZ Reader Card ZCP-EZRD-HEM7



40mm x 0.85mm Capillary Tubes CNT-ZPC7-40HE

Features

The LW Scientific ZipCombo is a multi-function micro-centrifuge available with a choice of three rotors to meet all your micro-centrifugation needs in one unit. The flat microhematocrit rotor spins shorter capillary tubes and eliminates angled separation lines, clay blow-outs, and broken tubes. The six place microtube rotor spins 1.5/2.0ml tubes for serum and urine separations and comes with adapters for smaller sized tubes (0.2ml-1.5ml). The optional 16-place PCR strip rotor spins two 8-tube strips. Designed with robust construction for long life, the ZipCombo is well-suited to accomplish blood and urine separations, microfiltrations, and DNA preparations. The small footprint makes the LWS ZipCombo centrifuge the perfect addition to any clinic or lab.

P. 770.270.1394 F. 770.270.2389

865 Marathon Parkway Lawrenceville GA 30046

7500g

P. 770.270.1394 F. 770.270.2389

865 Marathon Parkway Lawrenceville GA 30046

Warranty

LW Scientific instruments have a one (1) year limited warranty. This warranty is not valid on normal wear and tear, cosmetic damages caused by chemicals, solvents, and/or cleaning solutions, as well as acts of God.

Please register your product online at: www.lwscientific.com/warranty_form. Important: Warranty information must be completed within 30 days of purchase.

Before Operating

- 1 Read the instruction manual in full before operating. Store the operation instructions in a safe place, easily accessible by the trained staff who will be operating the centrifuge.
- 2 Remove the centrifuge from the shipping container and inspect for any possible shipping damage. If the centrifuge appears to be damaged, please contact your distributor immediately.

RECOMMENDED FLUID SPEEDS & TIMES:

Microhematocrits: 12,000 rpms – 3 minutes
Blood serum (Microtubes): 12,000 rpms – 3 minutes
Urine (Microtubes): 3000 rpms – 5 to 10 minutes

*Note: Please refer to your own procedures and/or specific test tube requirements.

Selecting and Changing Rotors

For a video on how to change rotors, please visit the following link: https://youtu.be/IEndwHsd99g













Place the centrifuge on a sturdy, level, non-slip surface. Verify that there are no loose objects or packing material in the tube chamber. **DO NOT PLUG UNIT IN**.

- 1 Press the open button to disengage the lid.
- 2 Lift the lid. If the desired rotor is already installed, ensure that it is secured to the rotor shaft by inserting the included allen wrench into the set screw on the underside of the rotor and turning it clockwise to tighten the screw. Do not over-tighten, as doing so may cause cracks in the underside of the rotor near the set screw. NOTE: Always store the allen wrench and extra rotors in a safe place.
- 3 To change rotors, insert the included allen wrench into the set screw on the underside of the rotor and turn it counter-clockwise to loosen the screw. Do not remove the set screw from the rotor. Simply loosen it until you are able to lift the rotor.
- 4 Lift off the rotor and set it aside in a safe place.
- **5** Select a rotor and slide it down over the motor shaft.
- 6 Insert the included allen wrench into the set screw on the underside of the rotor and turn clockwise to tighten the screw.

 Make certain rotor is secure on the motor shaft (especially after changing rotors) but do not overtighten.

Ilf you are using the hematocrit rotor, be certain to install the plastic cover plate and secure it in place by turning the red thumbscrew on the rotor cover before spinning samples.

P. 770.270.1394

F. 770.270.2389

865 Marathon Parkway Lawrenceville GA 30046

Operation

- 1 Close and latch the lid by pressing on the front center of the lid until it clicks. DO NOT push down hard, as it could damage the lid safety switch.
- 2 Plug the AC power cord into the appropriate approved and properly grounded AC outlet.
- 3 DO NOT INSERT TUBES AT THIS TIME! With rotor installed, turn the power switch on, set the speed dial to the lowest setting, and turn the timer to 10 minutes. The unit should begin spinning with a smooth whirring sound with little or no vibration. Next, increase the speed. If there are loud or unusual sounds, or if you experience excessive vibration, DO NOT OPERATE -- contact your dealer or LW Scientific, Inc.
- 4 Spin only balanced loads. Make sure that tubes are placed opposite each other. Proper sample balancing will improve sample separation and will extend the life of the centrifuge. Out of balance loads may damage the centrifuge.

*NOTE: The 6-place microtube rotor can be balanced with 2, 3, 4, or 6 tubes (3 tubes can be placed in a triangle configuration). The 12 place microhematocrit rotor can also spin 3 tubes in a balanced triangle configuration.

5 Ready for operation: Load your tubes and use the digital controls to set time and speed. Press the "Start/Stop" button to begin spinning.

Note: Always ensure rotor is secure before each use.

Spinning Microhematocrits

If you purchased a microhematocrit rotor, an EZ Reader card and a starter pack of 200 40mm tubes are included. Additional capillary tubes are available from your LW Scientific distributor.

- 1 To load, remove the rotor cover plate by unscrewing the red thumb screw.
- 2 Make sure the capillary tube is plugged with clay. Lay the tube into a slot with the clay outward.
- 3 Install the rotor cover plate by turning the red thumb screw, ensuring the cover plate seats down onto the rotor and is finger tight.
- 4 Close the centrifuge lid and run the unit for 3 minutes at 12,000 rpm.

NOTE: The maximum tube size for the hematocrit rotor is 40mm (length) by 0.95mm (diameter). Using tubes larger than 0.95mm in diameter can prevent the rotor cover from seating properly and cause blood and sealant to spin out of the tubes during the spinning process.

Reading Microhematocrits

- 1 After the rotor has stopped, remove the cover plate by unscrewing the red thumb screw and lifting the cover plate straight up.
- Place the EZ Reader Card on a countertop. Carefully remove one of the tubes and place it into the tube slot on the card and adjust the tube until the 0% line is aligned with the bottom of the fluid in the tube.



- 3 While the card is still resting on the countertop, and keeping the bottom of the fluid at the 0% line, slide the scale card until the top of the fluid is aligned with the 100% line.
- Read the separation line in the middle for your microhematocrit results.

P. 770.270.1394 F. 770.270.2389